


- FRONT PANEL - 1
- LEFT SIDE PANEL - 1
- RIGHT SIDE PANEL - 1
- CORNERS WITH SCREWS - 6

1. REMOVE FILM FROM THE FRONT PANEL
2. INSERT THE FRONT PANEL INTO THE ATTACHED CORNERS
3. THE TOP OF THE FRONT PANEL SHOULD BE LEVEL WITH THE SIDE PANELS
4. TIGHTEN THE SCREWS THAT ARE ATTACHED TO THE CORNERS

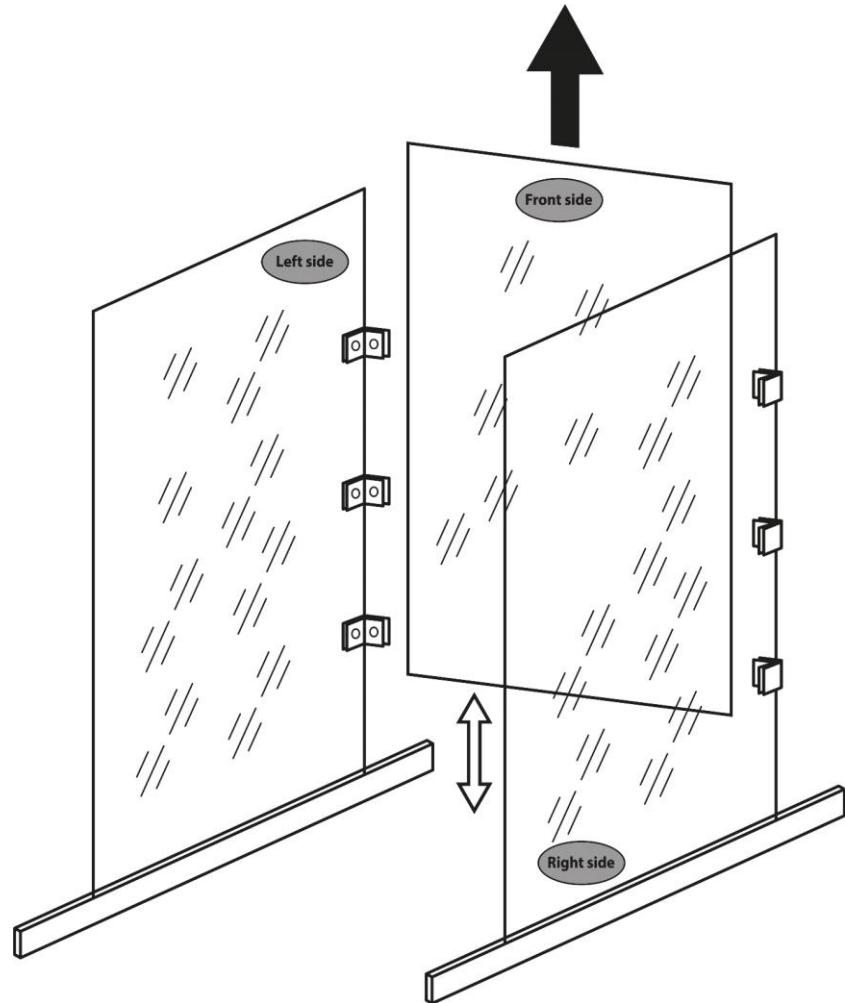

***** YOU CAN EASILY CHANGE THE SIZE OF THE OPENING BY
ADJUSTING THE FRONT PANEL UP OR DOWN*****

Plexiglass Cashier Protection Sneeze Guard